

# BOAT VENT II

SUPPORTS AND VENTS CANVAS BOAT COVERS


Used with either a 3/4" or 7/8" telescoping support pole (not included).  
Instructions on reverse.



**Fast and easy to install!**  
**Helps prevent mold and mildew growth!**  
**Helps prolong the life of your boat's interior!**



**CARVER**  
by **COVERCRAFT**®

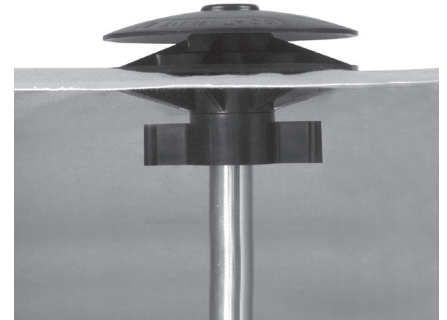

VENTII

# BOAT VENT II

SUPPORTS AND VENTS CANVAS BOAT COVERS


Used with either a 3/4" or 7/8" telescoping support pole (not included).  
Instructions on reverse.




**Fast and easy to install!**  
**Helps prevent mold and mildew growth!**  
**Helps prolong the life of your boat's interior!**



**CARVER**  
by **COVERCRAFT**®

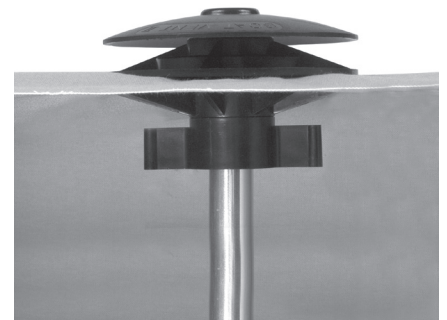

VENTII

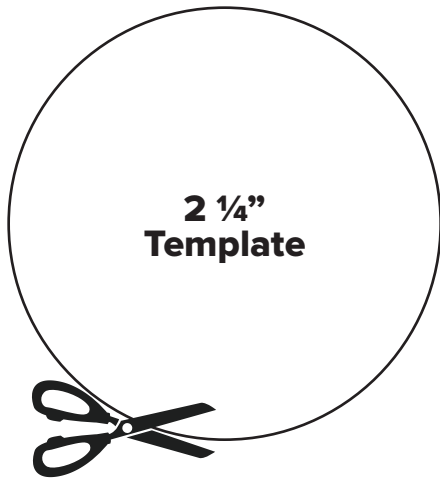


Carver by Covercraft Industries, LLC.  
212 N. Lyles Ave. Landrum, SC 29356  
[www.carvercovers.com](http://www.carvercovers.com)

## Installation Instructions

Tools Needed: Scissors

1. Mark the boat cover where vent is to be placed.
2. Cut a 2 1/4" hole in the boat cover using the template to the left.
3. Disassemble BOAT VENT II by twisting the large wing nut (bottom piece) counter-clockwise.
4. Separate the vent cap from the lower flange housing. The flange housing will separate into two pieces, upper flange and lower flange.
5. Slide the upper flange onto the vent cap by aligning the slots.
6. From the top (outside) of the boat cover, insert the vent cap through the hole in the boat cover so that the upper flange rests on the fabric.
7. From the bottom (underneath side) of the boat cover, connect lower flange to upper flange. **NOTE: Lower flange should be installed with the ridged side up, against the cover.** A slight twist will align the slots so that the teeth in the upper and lower flanges lock into place, sandwiching the fabric between them.
8. Re-attach the large wing nut.
9. Slide support pole (not included) into vent and adjust to the desired height.

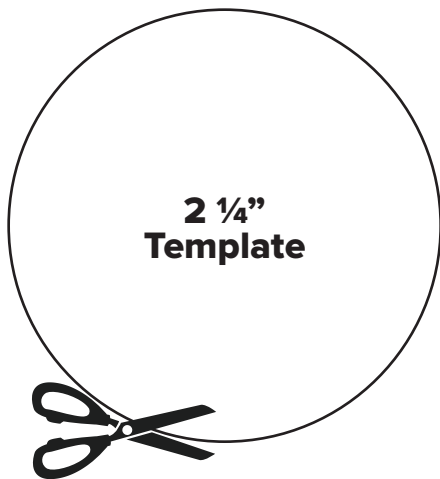

Carver by Covercraft Industries, LLC.  
212 N. Lyles Ave. Landrum, SC 29356  
[www.carvercovers.com](http://www.carvercovers.com)

## Installation Instructions

Tools Needed: Scissors

1. Mark the boat cover where vent is to be placed.
2. Cut a 2 1/4" hole in the boat cover using the template to the left.
3. Disassemble BOAT VENT II by twisting the large wing nut (bottom piece) counter-clockwise.
4. Separate the vent cap from the lower flange housing. The flange housing will separate into two pieces, upper flange and lower flange.
5. Slide the upper flange onto the vent cap by aligning the slots.
6. From the top (outside) of the boat cover, insert the vent cap through the hole in the boat cover so that the upper flange rests on the fabric.
7. From the bottom (underneath side) of the boat cover, connect lower flange to upper flange. **NOTE: Lower flange should be installed with the ridged side up, against the cover.** A slight twist will align the slots so that the teeth in the upper and lower flanges lock into place, sandwiching the fabric between them.
8. Re-attach the large wing nut.
9. Slide support pole (not included) into vent and adjust to the desired height.